

## Tools needed for **Throttle/Clutch sensor** service




- Hex key 2.5 x 110mm

## Throttle/Clutch sensor service


1

Remove 3 nuts which hold throttle/clutch sensor with **Hex key 2.5**

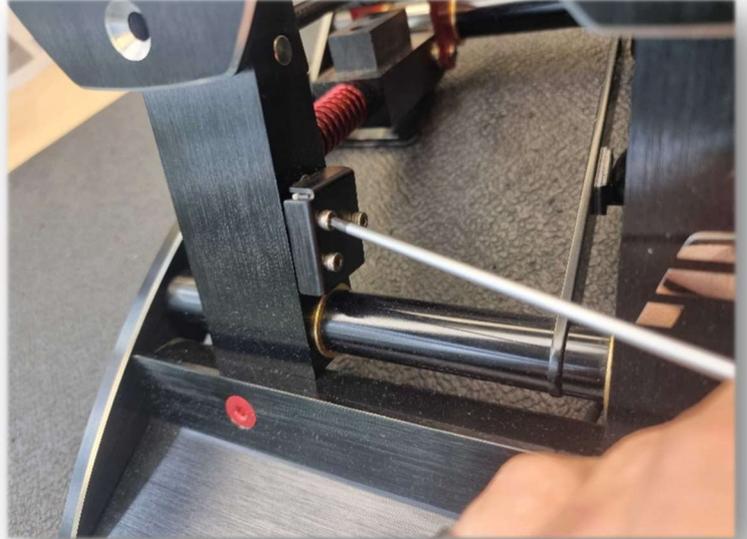

2

Remove the sensor holder with sensor from its place

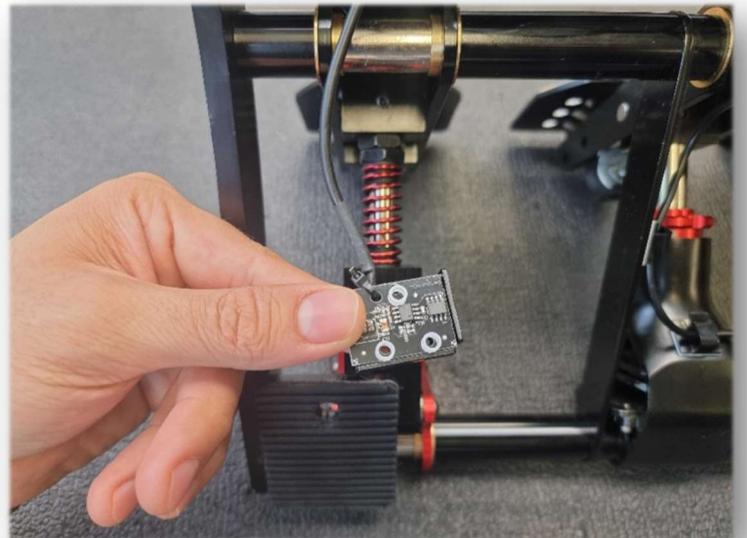

3

Unplug throttle/clutch sensor from main PCBA



4

Remove screws, plastic washers and sensor from holder




5

Place the throttle/clutch sensor on the holder as you see on picture



6

Place the nuts back to its place

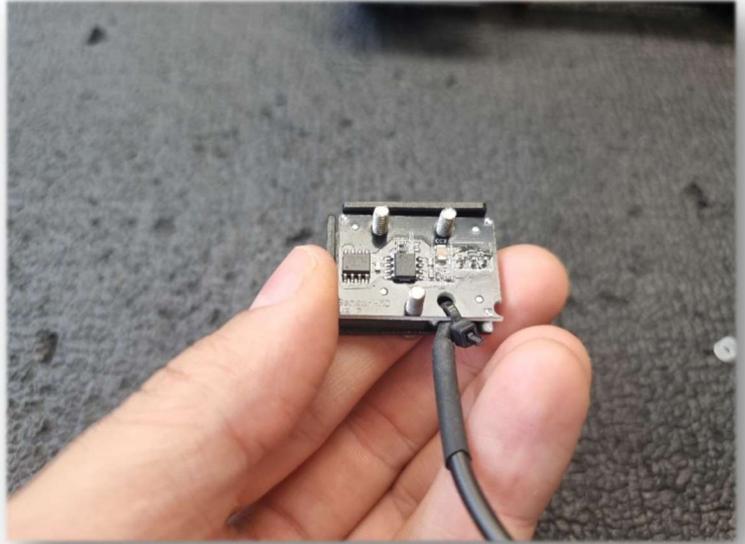


7

Place plastic washers on its place



8

Carefully place the sensor holder  
on its place

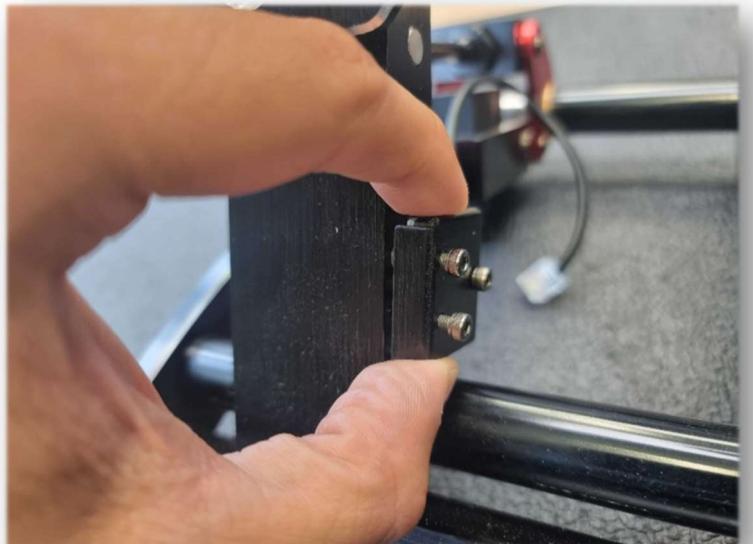


9

Tighten 3 nuts which hold throttle/clutch sensor with **Hex key 2.5**

 **CAUTION**

Do not tighten the screws too hard as you may damage the sensor!

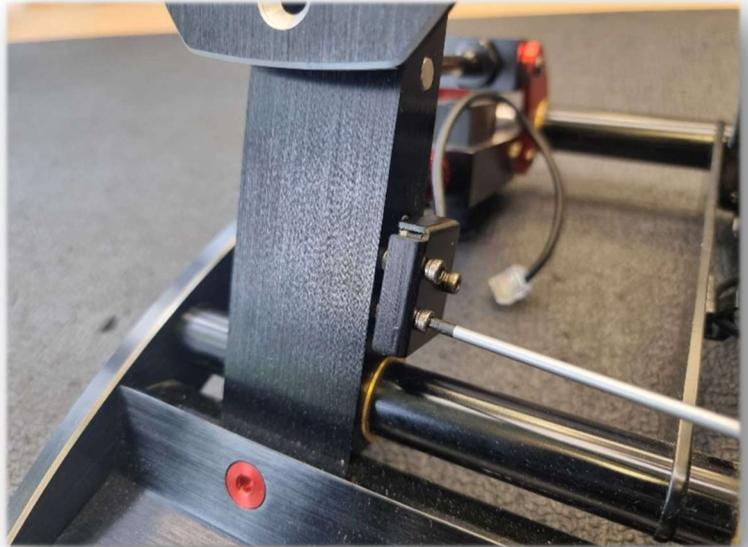

10

Plug in throttle/clutch cable in main PCBA

**TEST THE PEDALS!**

