

Tools needed for **Rod** service



- Hex key 4 x 110mm

Rod service


1

Remove shifter knob by unscrewing it to left and place it safely



2

Pull **Hex key 4** into the hole on shifter rod and unscrew it

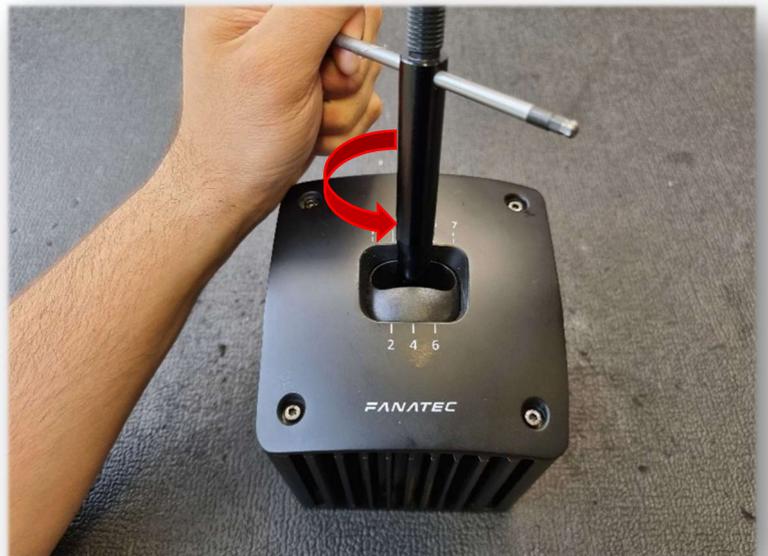

3

Exchange the Rod and assembly shifter. See Paragraph "**Assembly manual**" and follow steps **20-14**