

Tools needed for **Throttle spring** service



- Hex key 3 x 110mm

Throttle spring service


1

Remove 2 screws which hold throttle block with **Hex key 3** and place them safely




2

Push black block toward pedal and pull it out of its position

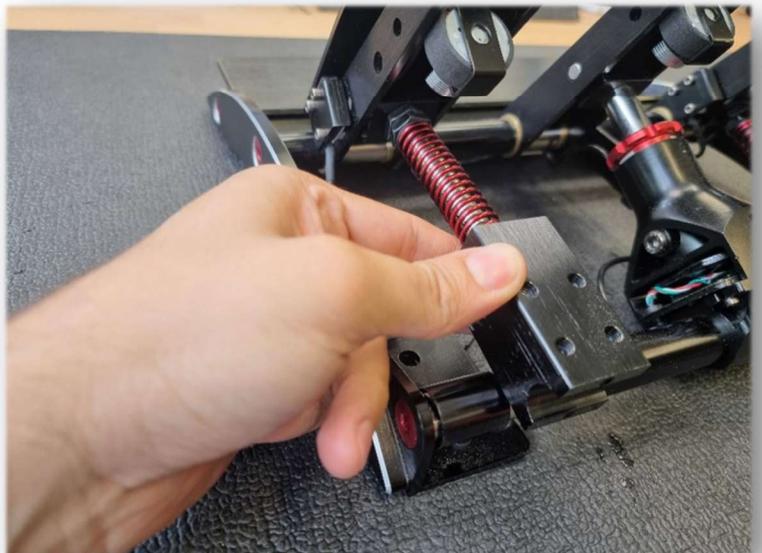

3

Remove black block and place it safely

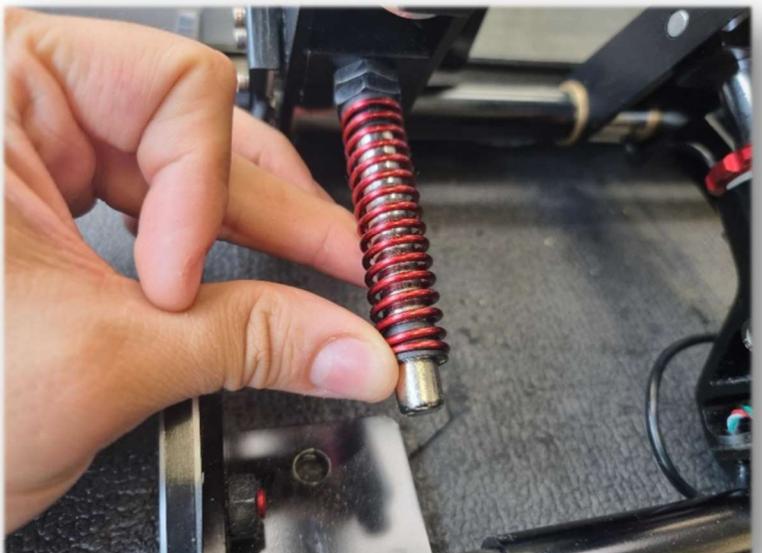

4

Remove throttle spring



5

Place new throttle spring on joint




6

Turn back black block on joint



7

Push the black block toward pedal and turn it back on its place, 4 threads should be turned up

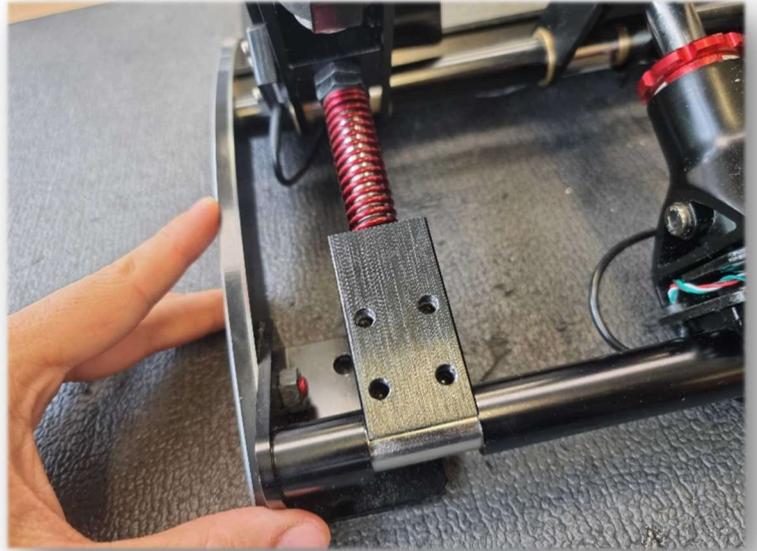

8

Tighten 2 screws with **Hex key 3**

TEST THE PEDALS!

